

# coatmaster Flex - local server 5.1 Direct connection



coatmaster

## Coupling Flex to local-server

1. Connecting power



2. Power-on server



3. Select server wifi



4. Select local-server



5. Enter license/password



## Scope of delivery

- Local-Server
- Wi-Fi-Antenna
- Power-Supply
- Power-Cord




## Accessing Measurement-Data

1. Connecting to server over Wi-Fi or LAN\*



2. Access IP-Address with internet-browser

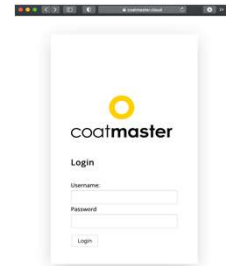

Wi-Fi: 10.10.0.1:9080  
LAN: 192.168.10.146:9080

3. Enter license/password



4. Visualize & export data

