



Flex Update 5.1


1. Unzip the Software to a new Folder.
2. Connect your PC to the same wifi as the coatmaster Flex.
3. Start FlexUpdater.exe
4. Select your Device, click refresh if it's not in the list or enter the ip-address manually

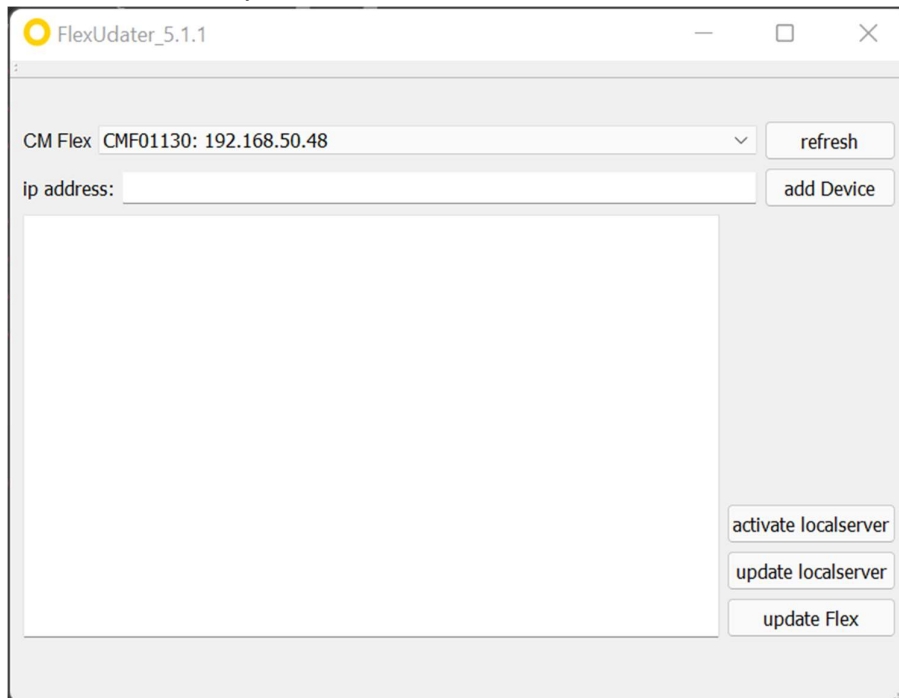

5. Select the update file “update_5_1_0_1_release.tar.gz.enc”.

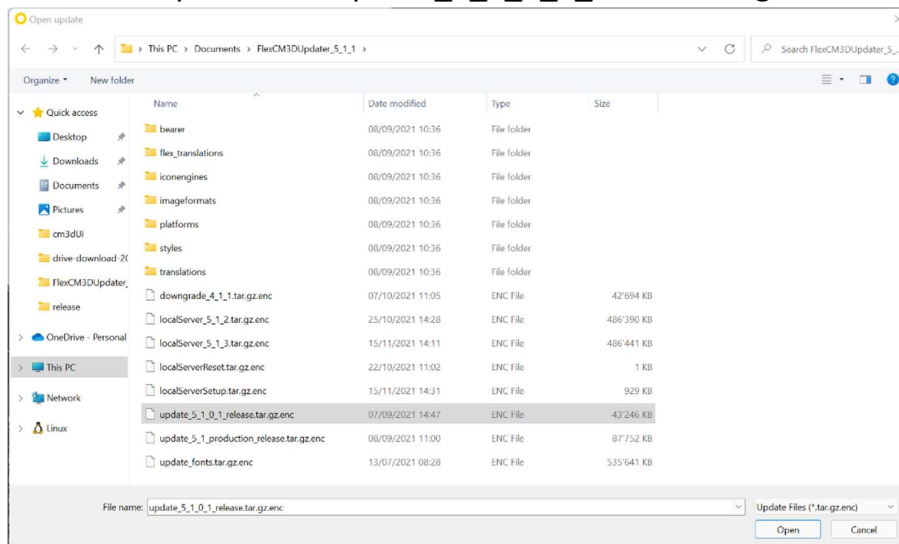

6. Wait for the session to be done (can take up to 10 min)

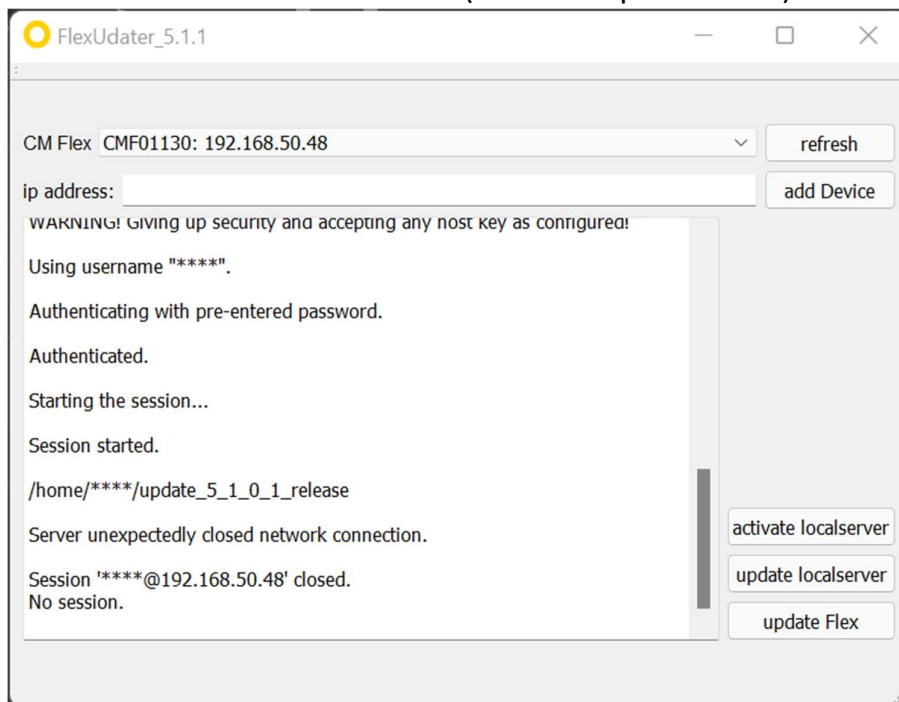

7. If the flex has automatically rebooted the update is complete

8. If some characters are not displayed correctly (□ instead of the correct character) you have to update the fonts by updating the device with the “update_fonts.tar.gz.enc” file.