

coatmaster Flex - local server V5.1 In custom network



Coupling Flex to local-server over custom network

<p>1. Connect power</p>	<p>2. Power-on server</p>	<p>3. Connect to server</p> <p>Via LAN</p>	<p>4. Change Static-IP in WebUI (optional) Settings → Network settings</p> <p>Network settings <input checked="" type="checkbox"/> WLAN <input type="checkbox"/> DHCP IP-Adresse: 192.168.10.146 Subnet: 255.255.255.0 Gateway: 192.168.10.1 <input type="button" value="Save"/></p>	<p>5. Select Wi-Fi</p> <p>Wi-Fi in the same network as Local Server</p>	<p>6. Select custom</p> <p>http://192.168.10.146:8080</p>	<p>7. Enter license/password</p> <p>Lic: hkeqex Pw: oxjzbe</p>	
-------------------------	---------------------------	--	--	---	---	--	--

Scope of delivery

- Local-Server
- Wi-Fi-Antenna
- Power-Supply
- Power-Cord



Accessing WebUI and Measurement-Data

<p>1. Connecting to server over Wi-Fi or LAN*</p>	<p>2. Access IP-Address with internet-browser</p> <p>Wi-Fi: 10.10.0.1:9080 LAN: 192.168.10.146:9080</p>	<p>3. Enter license/password</p> <p>Username: hkeqex Password: oxjzbe</p>	<p>4. Visualize & export data</p>
---	---	---	---------------------------------------