

# coatmaster Flex V2 - Maintenance process



coatmaster

## Step by Step

1. Order Maintenance-Kits from coatmaster:

Contact: [info@coatmaster.com](mailto:info@coatmaster.com)

Article Number: 100.0013



2. Execute Maintenance according to the coatmaster Flex Maintenance Manual.



3. Perform the Test for the Certificate of Calibration according to the Certificate of Calibration Guidelines.



4. Fill out the Certificate of Calibration



5. Fill out the coatmaster Flex Service Report. For the «Modifications and Versions» Section use the Modification Overview Document as a Guide.



6. Scan the Service Report and the Certificate of Calibration



7. Send the following documents to [maintenance@coatmaster.com](mailto:maintenance@coatmaster.com), where the Service will be registered.

- Coatmaster Flex Service Report
- Certificate of Calibration



## Important

The Service Message on the coatmaster Flex can only be reset with the Serial Number of the Maintenance-Kit. The Serial Number is printed on the Box of the Kit and must be listed in the Service Report. Please keep the Serial Number until the Service Message has been reset.

## Documents

Service Report



<https://coatmaster.com/wp-content/uploads/2023/02/Flex-service-report-distributors.pdf>

Certificate of Calibration



<https://coatmaster.com/wp-content/uploads/2023/02/Certificate-of-Calibrationen-Flex.pdf>

coatmaster Flex Maintenance Manual



<https://coatmaster.com/wp-content/uploads/2023/02/Maintenance-manual-coatmaster-Flex-V2-EN.pdf>

Certificate of Calibration Guidelines



[https://coatmaster.com/wp-content/uploads/2023/02/Certificate-of-Calibration\\_en\\_Flex\\_V1.1.pdf](https://coatmaster.com/wp-content/uploads/2023/02/Certificate-of-Calibration_en_Flex_V1.1.pdf)

Modification Overview



<https://coatmaster.com/wp-content/uploads/2023/02/FlexModificationsOverview.pdf>