


7. Replace ring glass

Disassembly the ring glass / Ringglas demontieren

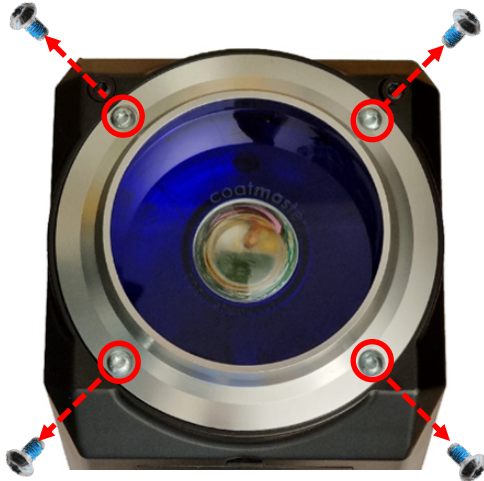

remove the four screws / die vier Schrauben entfernen




remove the reflector ring / Reflektorring entfernen



Remove the ring glasses and the O-ring / Ringglas und O-Ring entfernen


Attention! The ring glasses can fall out and brake! Achtung Ringgläser können herausfallen und brechen!

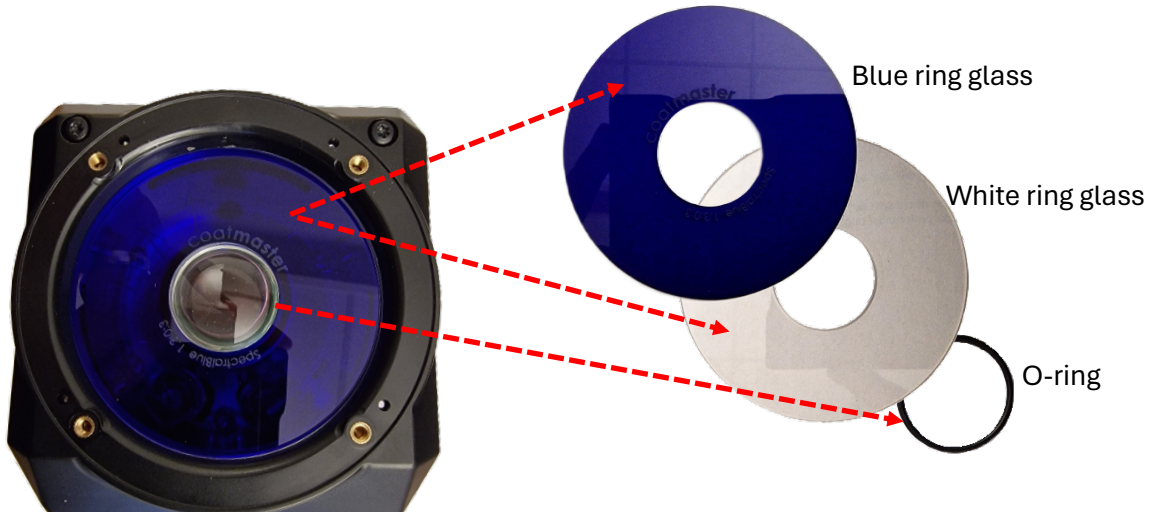

7. Replace ring glass

Assembly the ring glass / Ringglas montieren

Insert the O-ring the white- and the blue-glass in front of the flash bulb, mind the order! /
O-Ring, Weiss- und Blauglas vor die Blitzlampe einlegen, Reihenfolge beachten!

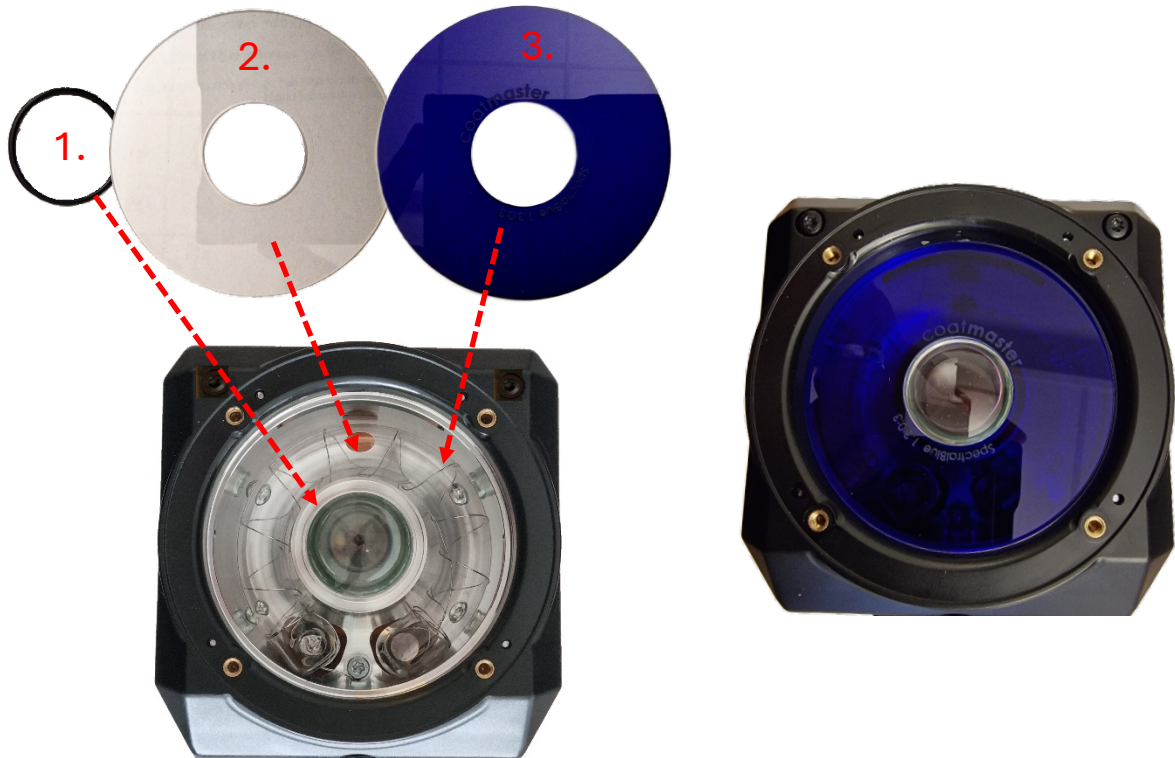

re-assembly the reflector ring and
Reflektorring wieder einlegen und

re-assembly the four screws
die die vier Schrauben wieder montieren

