

coatmaster Flex - Cloud



Login

1. Connect to your server

Server	URL
Europe	https://coatmaster.cloud
US	https://useast.coatmaster.cloud
China	https://ningxia.coatmaster.online
Local server	https://10.10.0.1:9080
Custom servers	Enter the custom IP address.

2. Enter license/password



Login

Username:

Password:

Login




3. Choose the language

Language

English

Logout

4. Cloud main menu

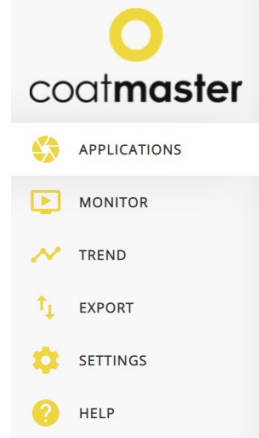

Applications


Available applications. Details of the number of blocks and measurements. Edit, copy and delete options.

Applications

Name	Blocks	Measurements	Last measurement:	
Powder colour	35	578	2021-04-21	
Powder white	11	200	2021-04-16	
Cured white	6	203	2021-04-16	
Cured colour	14	592	2021-04-21	
Calibration standard	1	5	2021-03-25	

Trend

1. Thickness Trend

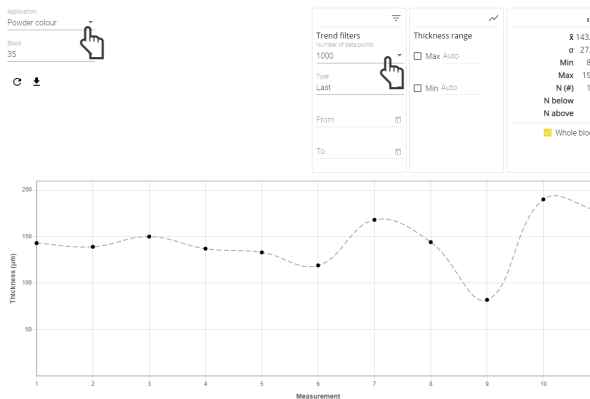

2. Select Application & Block

Application: Powder colour

Block: 35


3. Filters

Trend filters: 1000, Type: Last, From: , To:

Thickness range: Max Auto, Min Auto

Statistics: \bar{x} 143.8, σ 27.8, Min 82, Max 190, N (#) 11, N below 0, N above 0, Whole block

Monitor

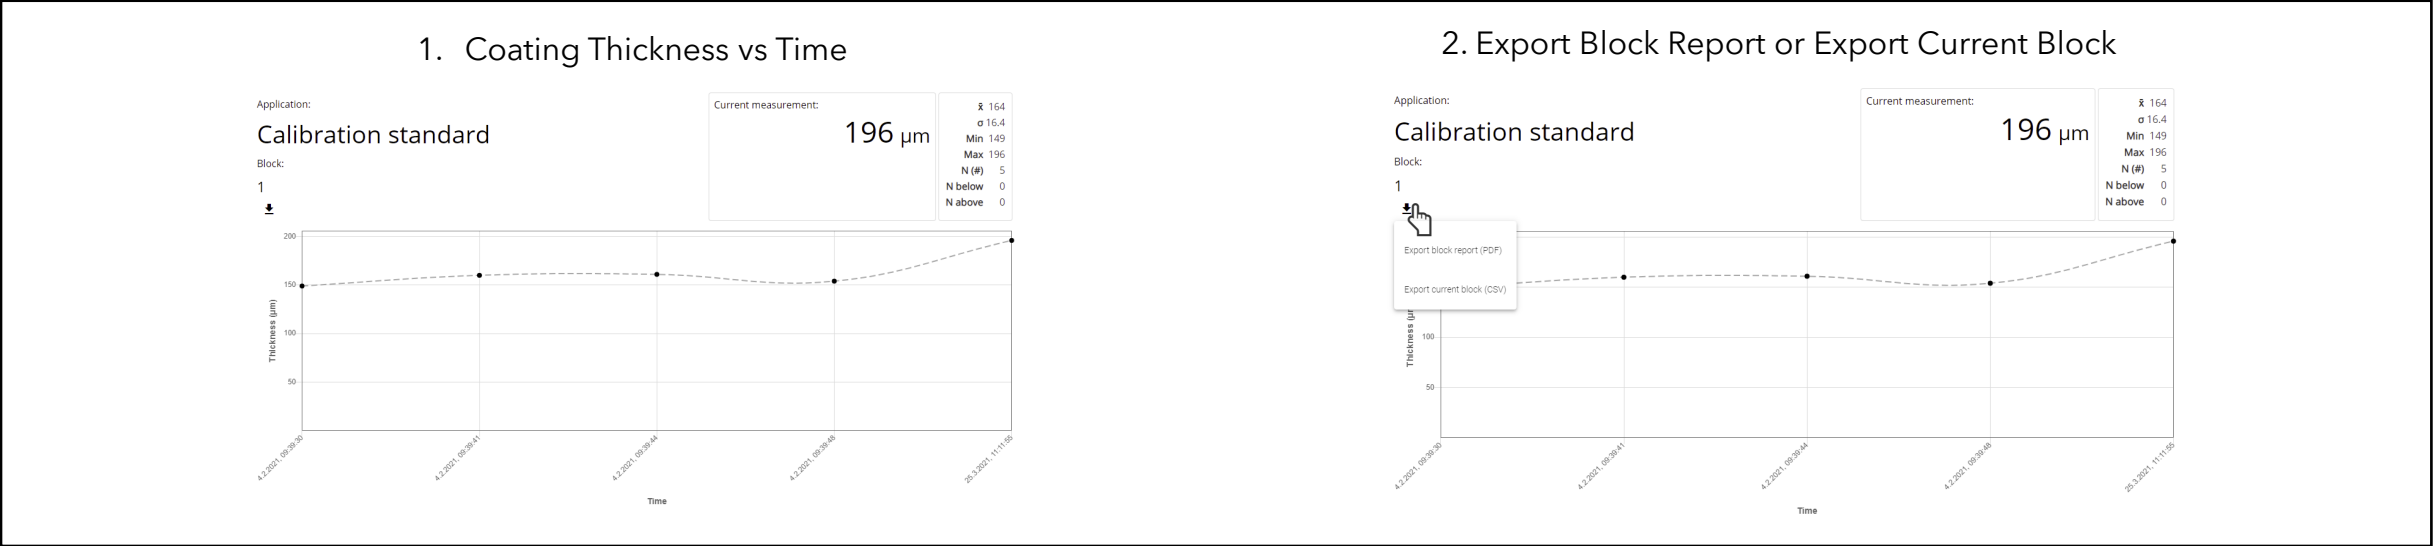

Export

1. Select Application

Export Application Data

Available	Selected
Powder colour 35 578 2021-04-21	Powder colour 35 578 2021-04-21
Powder white 11 200 2021-04-16	
Cured white 6 203 2021-04-16	
Cured colour 14 592 2021-04-21	
Calibration standard 1 5 2021-03-25	

2. Limit your data selection. Choose a start date

Cured white 6 203 2021-04-16

JULI 2021

13.7.2021 Filter

3. Apply one or more filters. Click on Export

Cured white 6 203 2021-04-16

Cured colour 14 592 2021-04-21

Calibration standard

- SNR
- Fit error
- Fit warning
- Error

13.7.2021 Filter